



NOTE:
 1. FOR USE WITH GUYED AND BRACKETED TOWERS ONLY
 2. IT SHALL BE THE CUSTOMER'S OR INSTALLER'S RESPONSIBILITY TO PROVIDE STRUCTURALLY ADEQUATE SUPPORTS FOR PIER & ANCHOR CONNECTIONS. IT MAY ALSO BE NECESSARY FOR THE CUSTOMER/INSTALLER TO DETERMINE THAT INSTALLATION COMPLIES WITH LOCAL CODES.

TEMPORARY STEEL GUYING IS NECESSARY DURING INSTALLATION AND DISMANTLING

AMERICAN TOWER COMPANY
 ISO 9001-2000
 P.O. Box 29 Shelby, Ohio 44875
 Telephone (419) 347-1185 info@amertower.com
 Fax (419) 347-1654 www.amertower.com
 Since 1953

TITLE
 AMERITE 55 CONCRETE BASE PLATE WELDMENT

SIZE	DWG NO	SHT. #
A	1262	1
DRAWN BY: DOW		DATE 3/19/2005

ITEM	QTY	PART NUMBER	DESCRIPTION
2	3	1261	AMERITE 55 STUB LEG
1	1	1260	BASE PLATE

Parts List