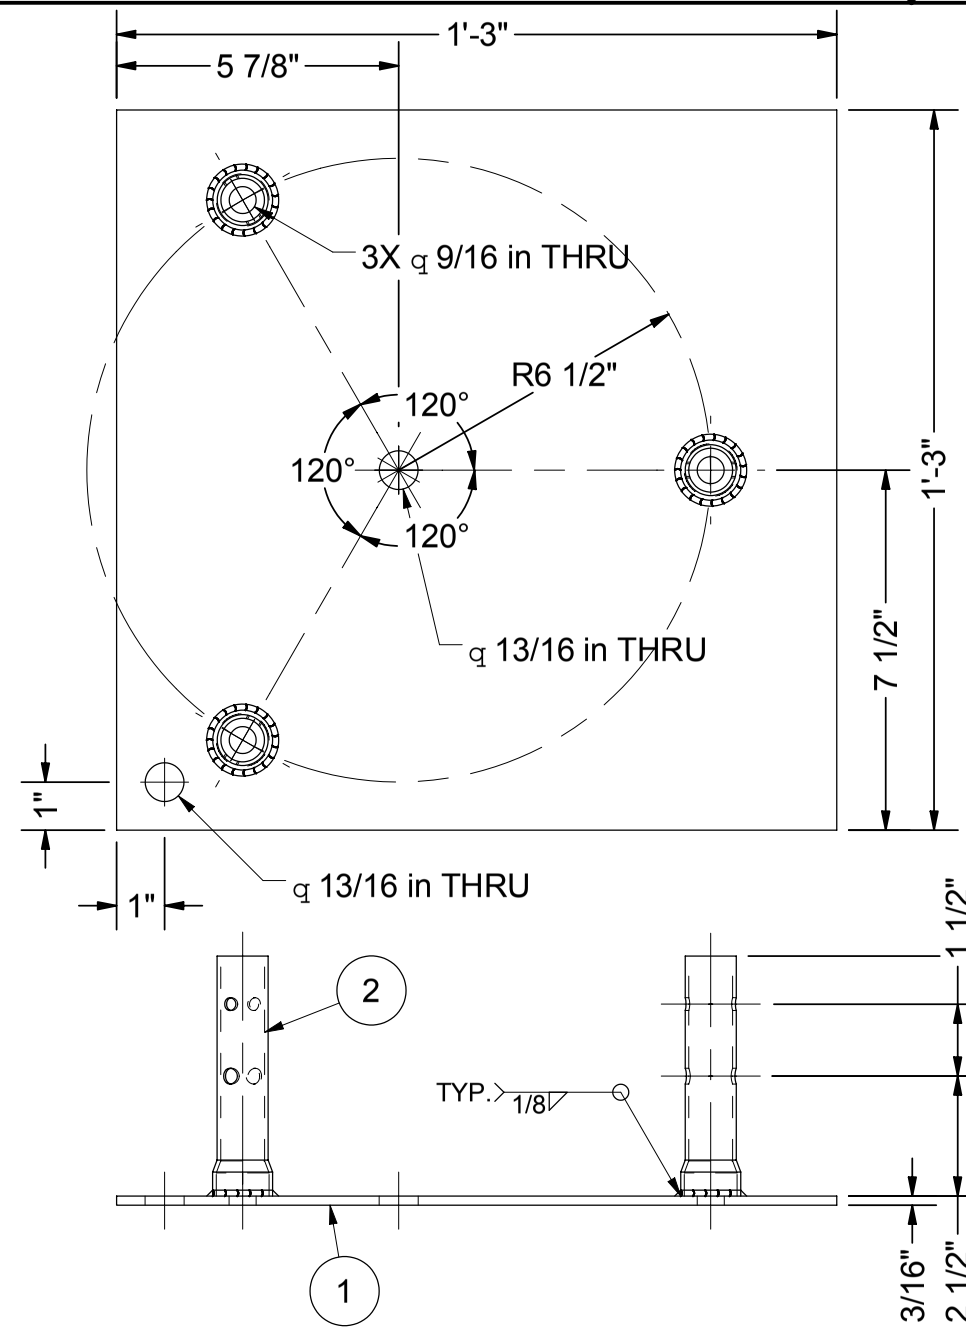

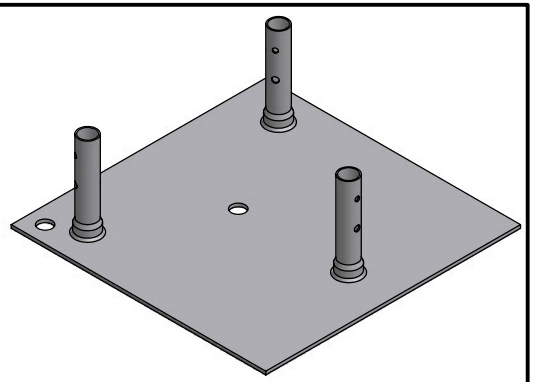

NOTE:
1.FOR USE WITH GUYED AND BRACKETED TOWERS ONLY

2.IT SHALL BE THE CUSTOMER'S OR INSTALLER'S RESPONSIBILITY TO PROVIDE STRUCTURALLY ADEQUATE SUPPORTS FOR PIER & ANCHOR CONNECTIONS. IT MAY ALSO BE NECESSARY FOR THE CUSTOMER/INSTALLER TO DETERMINE THAT INSTALLATION COMPLIES WITH LOCAL CODES.

TEMPORARY STEEL GUYING IS NECESSARY DURING INSTALLATION AND DISMANTLING

ITEM	QTY	PART NUMBER	DESCRIPTION
2	3	1254	AMERITE 25 5" STUB LEG
1	1	1255	BASE PLATE CONCRETE FOR AMERITE 25

Parts List

AMERICAN TOWER COMPANY
ISO 9001-2000
P.O. Box 29 Shelby, Ohio 44875
info@amertower.com
Telephone (419) 347-1185
www.amertower.com Since 1953
Fax (419) 347-1654

TITLE
AMERITE 25 CONCRETE BASE PLATE WELDMENT

SIZE		DWG NO	SHT. #
A		1256	1

DRAWN BY: DOW DATE 3/12/2005